



# MAINTENANCE CHECKLIST

Maintenance should be performed 1–2 times per year

## Basement Watchdog SIT Series Sump Pumps (SIT-33D/SIT-50D)

1. Remove all debris from the bottom of the pit.
2. Remove all debris floating in the water.
3. Remove all debris from the float switch cage.
4. Remove all debris around the air relief valve.
5. Fill the pit with water. Make sure pump turns on at the intended level.
6. While the pump is running, make sure pump is evacuating water at a good pace.
7. While the pump is running, make sure a stream of water is escaping from the air relief valve. If not, clear the hole of any deposits or debris.
8. If your pit, pump and discharge lines have developed a reddish, slimy buildup (iron ochre) or other deposits, use Basement Wash-Dog™, a pit cleaner that will address the buildup and leave your sump system flowing freely.



### PARTS & SERVICE INFORMATION

You can receive technical support, parts, or service by calling Glentronics, Inc. at 800-991-0466, Option #3, emailing us at [Service@Glentronics.com](mailto:Service@Glentronics.com), or by visiting the Basement Watchdog website at [www.basementwatchdog.com](http://www.basementwatchdog.com). Send your unit to the address (right) if repairs are needed:

**Glentronics, Inc.**  
**ATTN: Repairs**  
645 Heathrow Drive  
Lincolnshire, IL 60069-4205



[www.BasementWatchdog.com](http://www.BasementWatchdog.com)

800-991-0466

[Service@Glentronics.com](mailto:Service@Glentronics.com)