

## Basement Watchdog SP Series Sump Pumps (SP-33T/SP-50T)

1. Remove all debris from the bottom of the pit.
2. Remove all debris floating in the water.
3. Remove all debris from the float switch.
4. Remove all debris around the air bleed hole.
5. Fill the pit with water. Make sure pump turns on at the intended level.
6. Make sure the tether float switch is moving freely.
7. While the pump is running, make sure pump is evacuating water at a good pace.
8. While the pump is running, make sure a stream of water is escaping from the air bleed hole near the bottom of the pump and the air bleed hole in the PVC pipe. If not, clear the hole of any deposits or debris.
9. If your pit and pump have developed a reddish, slimy buildup (iron ochre) or other deposits, use Basement Wash-Dog™, a pit cleaner that will address the buildup and leave your sump system flowing freely.



### PARTS & SERVICE INFORMATION

You can receive technical support, parts, or service by calling Glentronics, Inc. at 800-991-0466, Option #3, emailing us at [Service@Glentronics.com](mailto:Service@Glentronics.com), or by visiting the Basement Watchdog website at [www.basementwatchdog.com](http://www.basementwatchdog.com). Send your unit to the address (right) if repairs are needed:

**Glentronics, Inc.**  
**ATTN: Repairs**  
645 Heathrow Drive  
Lincolnshire, IL 60069-4205