

Basement Watchdog Sewage Pump (SW-50T)

1. Flush toilets and run bathroom sinks to fill the sewage pit with clean water.
2. Remove all debris from the bottom of the pit.
3. Remove all debris floating in the water.
4. Remove all debris from the float switch.
5. Remove all debris around the air bleed hole.
6. Fill the pit with water. Make sure pump turns on at the intended level.
7. Make sure the tether float switch is moving freely.
8. While the pump is running, make sure pump is evacuating water at a good pace.
9. While the pump is running, make sure a stream of water is escaping from the air bleed hole near the bottom of the pump and the air bleed hole in the PVC pipe. If not, clear the hole of any deposits or debris.



PARTS & SERVICE INFORMATION

You can receive technical support, parts, or service by calling Glentronics, Inc. at 800-991-0466, Option #3, emailing us at Service@Glentronics.com, or by visiting the Basement Watchdog website at www.basementwatchdog.com. Send your unit to the address (right) if repairs are needed:

Glentronics, Inc.
ATTN: Repairs
645 Heathrow Drive
Lincolnshire, IL 60069-4205