

Maintenance Checklist

Utility Pump

Maintenance should be performed periodically. Follow the safety instructions within this manual before performing any maintenance.

1. Remove all debris from the pump strainer.
2. Remove all debris from the pump switch.
3. Remove all debris from the area where the pump is operating.
4. Remove all debris around the air relief valve.