

# **MAINTENANCE CHECK LIST**

**For the Basement Watchdog SI-33V/SI-50V Sump Pump**

**Maintenance should be performed 1-2 times per year.**

1. Remove all debris from the bottom of the pit.
2. Remove all debris floating in the water.
3. Remove all debris from the float switch and lift rod.
4. Remove all debris around the air bleed hole.
5. Fill the pit with water. Make sure pump turns on at the intended level.
6. While the pump is running, make sure pump is evacuating water at a good pace.
7. While the pump is running, make sure a stream of water is escaping from the air bleed hole. If not, clear the hole of any deposits or debris.